## MVHR series





(Lock is not attached)

# Symbol

3 R






#### **Specification – Manual type**

Model		MVHR-300		MVHR-302 / 400			
Bore No.		8A	10A	8A	10A	15A	
Port size		Rc1/4	Rc3/8	Rc1/4	Rc3/8	Rc1/2	
No. of port		3					
No. of position		2					
Medium		Air					
Operating pressure range		0.1~1 MPa					
Proof pressure		1.5 MPa					
Effective orifice (mm <sup>2</sup> )	$IN\toOUT$	39	56	39	56	66	
	$OUT\toEXH$	39	45	39	45	58	
Ambient temperature		-5~+60°C (No freezing)					
Weight		323g		304g / 311g			

#### **Specification – Solenoid type**

•							
Model		MVHR-300S		MVHR-302S / 400S			
Bore No.		8A	10A	8A	10A	15A	
Port size		Rc1/4	Rc3/8	Rc1/4	Rc3/8	Rc1/2	
No. of port		3					
No. of position		2					
Medium		Air					
Operating pressure range		0.15~1 MPa					
Proof pressure		1.5 MPa					
	OUT	39	56	39	56	66	
$(mm^2)$ OUT $\rightarrow$	EXH	39	45	39	45	58	
Ambient temperature		-5~+60°C (No freezing)					
Voltage		AC110V, 220V (50/60)Hz, DC24V					
Power consumption		AC=4.8/4.4VA, 6/4.9VA, DC=2W					
Available voltage range		±10%					
Insulation class		F class					
Weight		39	7g	378g / 385g			

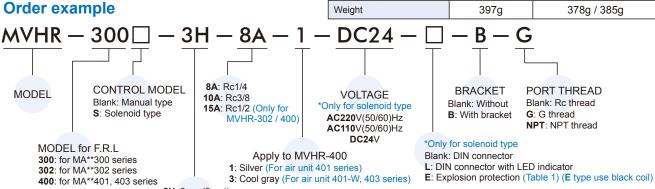

**3H**: 3way(3port) (Residual pressure release)

## $\frac{\text{Order example of bracket}}{\text{MVHR} - 302 - \underline{B}}$



BRACKET \* 300, 302 and 400 use the same bracket. V, 403 series) <sup>L</sup> Table 1

#### Property for explosion-proof type

Anti-explosion class	EEx m II T4			
Voltage	AC110V. 220V.(50/60)Hz. DC24V.			
Power consumption	AC=4.4VA DC=5W			
Available voltage range	±10%			
Insulation class	F class			
Wire length	3 m			



### MVHR A Precautions / Dimensions – Manual type

#### ON-OFF VALVE




#### **Precautions**


Please note during trial operation and maintenance.

- When the A port is open to the atmosphere, do not switch the valve to prevent leakage and malfunction of the seal ring due to fluid flow.
- ② Dust entering the valve body will cause malfunction or damage to the seal.
- Please install a filter and oil mist separator on the inlet side (With a filtration of 5 micron or lower).
- Be sure of cleaning the cutting fluid and foreign material in the pipe before connection to avoid malfunction.
- The internal grease may flow out on the outlet side, so it is not recommended to use it in a completely oil-free environment in pipe.


#### MVHR-300

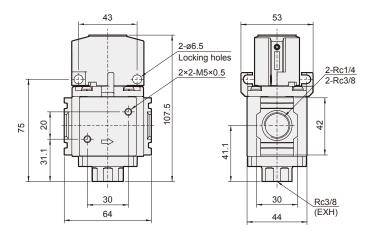

#### MVHR-302

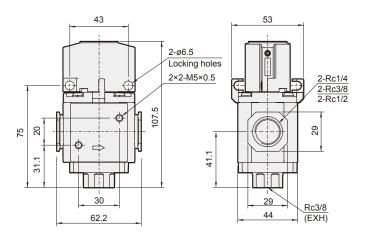

MVHR-400

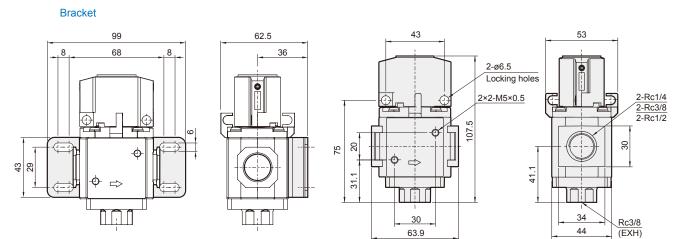





MVHR-\*-B

### **MVHR** Dimensions – Solenoid type

#### ON-OFF VALVE




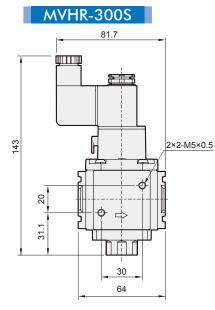


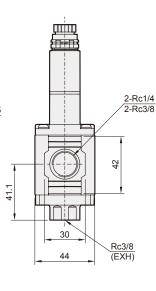



#### MVHR-302S



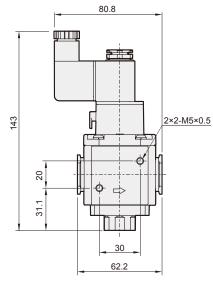

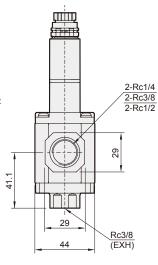

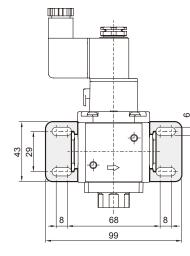

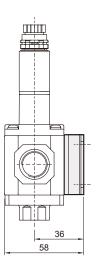

MVHR-400S

